

Wood Slat Venetian Blind

Fitting Instructions



Tools you may need...

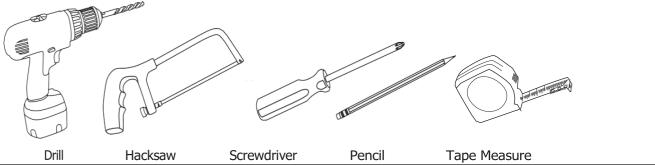

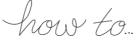


fit your blind...

The box will include the blind, valance and an accessory box (end caps, wall brackets, cord cleat, and valance clips)


When you measured for your blind you will have decided whether you wanted an Inside Recess blind or an Outside Recess blind, and whether you were fitting to the ceiling, ceiling of the recess or directly onto the wall. The brackets for your blind are universal and will suit all positions.

Step 1: Select the fixing position for your blind Top fix installs the screw bottom up through the top of the brackets attaching to the ceiling or top of the window recess.

Face fix fits through the back of the bracket, directly into the wall.

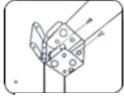



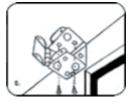

Outside Recess Top Fix (ceiling)

- **Step 2:** Mark out with a pencil where you want to fit the brackets; use the brackets as a template to identify your screw points.
- *Tip 1:* Your blind should be central either inside the recess or overlapping the recess; leave an equal gap or overhang on both sides.
- Tip 2: If fitting inside recess, check enough allowance has been made so that the blind doesn't get caught on window handles when operating
- *Tip 3:* If fitting outside recess the top of the blind should be fitted at the point chosen when measured; maybe using the drop of your blind, work upwards to find your installation height.
- **Step 4:** Drill into the wall/ceiling at the marked positions (use an appropriate drill bit for the wall/ceiling type) to a minimum depth of 40mm. Insert the plugs, pushing (or hammer) them in until flush with the wall/ceiling. Screw each bracket into position using the screws provided.
- **Step 5:** Once the brackets are securely in place, slide the headrail into the brackets, making sure the cords are facing into the room. Close the bracket doors, locking them in place.
- **Step 6:** To fit the valance to cover the headrail, measure the length you require the valance to be. Use a sharp hacksaw to cut the valance to length. Attach a minimum of 2 plastic clips (supplied in the accessory box) over the front edge of the headrail. Fit your valance into these clips, securing it in place.
- **Step 7:** Finally, you will need to fit the blind safety cleat securely to the wall. This cord cleat should be screwed to the wall at 150cm from the floor; when the blind is drawn up the excess cord should be wrapped around this cleat to keep it out of reach of children.

Please read all safety warnings and fitting information fully prior to installing your blind.
All of our blinds are compliant with British Safety Standard BS EN13120. For further information regarding blind safety visit www.makeitsafe.org.uk

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate this product. However, to avoid strangulation and entanglement, and for extra safety measures, we would recommend that blind operating cords are kept out of reach of small children, and beds and cots are not positioned under blinds with operating cords.

Care and Maintenance of your blind

Real wood venetian blinds are designed to last a long time. Regular cleaning will help the visual quality remain the same but in high sun positions some fading is possible.

Use a feather duster regularly to remove light dust & any other loose bits that may be on the slats. To give a final thorough clean, use a slightly dampened cloth to wipe the slats. Do not use soap and water to clean wood venetian blinds in case water seeps into the slats, as this may cause warping.



Just Furnishings Limited

customerservice@justfurnishings.co.uk| Highlands Road, Solihull, West Midlands, B90 4NP www.justfurnishings.co.uk

Company Reg: 05998499