



## How to Measure Curtains on a Pole

Always use a metal tape measure, as cloth or plastic tapes may stretch.

Be sure to double check all your measurements.

All measurements should be supplied in whole centimetres. If your measurement falls in between two whole centimetres, always round down to the nearest centimetre.


### **MEASURING the WIDTH:**

If you have an existing pole which you are using, or replacing at the same length, measure the length of the straight pole between the 2 end caps / finials. This is your finished curtain width.

If you are starting afresh, recommendation is for the pole to go past the window 15cm either side (excluding finials).

Measure the window width and add 30cm for your finished curtain width.

Although, you can add as much or as little as you prefer.

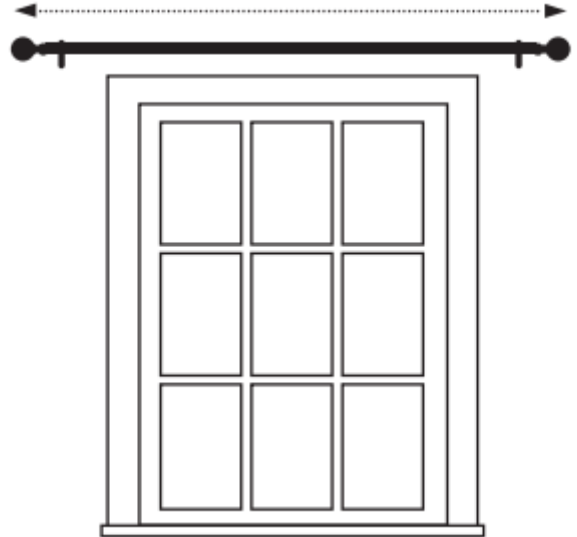

### **MEASURING the DROP:**

If you are fitting a new pole, fit it between 10-15cm above the window recess.

**For all Pleated curtains:** Measure from the underside of the eye on the ring to where you want the curtain to finish. Make allowances below depending upon length. This is your finished curtain drop.

**For Eyelet curtains:** Measure from the top of the pole to where you want the curtains to finish. Make allowances below depending upon length. This is your finished curtain drop.

**Please note for Eyelets headings only:** we will add a 2cm upstand of fabric above the eyelet



**Sill Length**  
1cm above sill



**Below Sill Length**  
10cm below sill



**Full Length**  
1cm from the floor

### **My Curtain Measurements:**

Finished Curtain Width:

Finished Curtain Drop: